

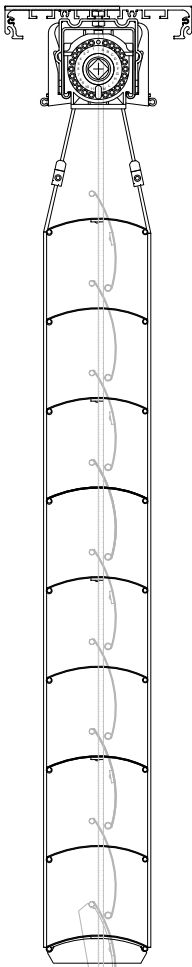
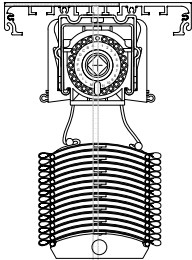
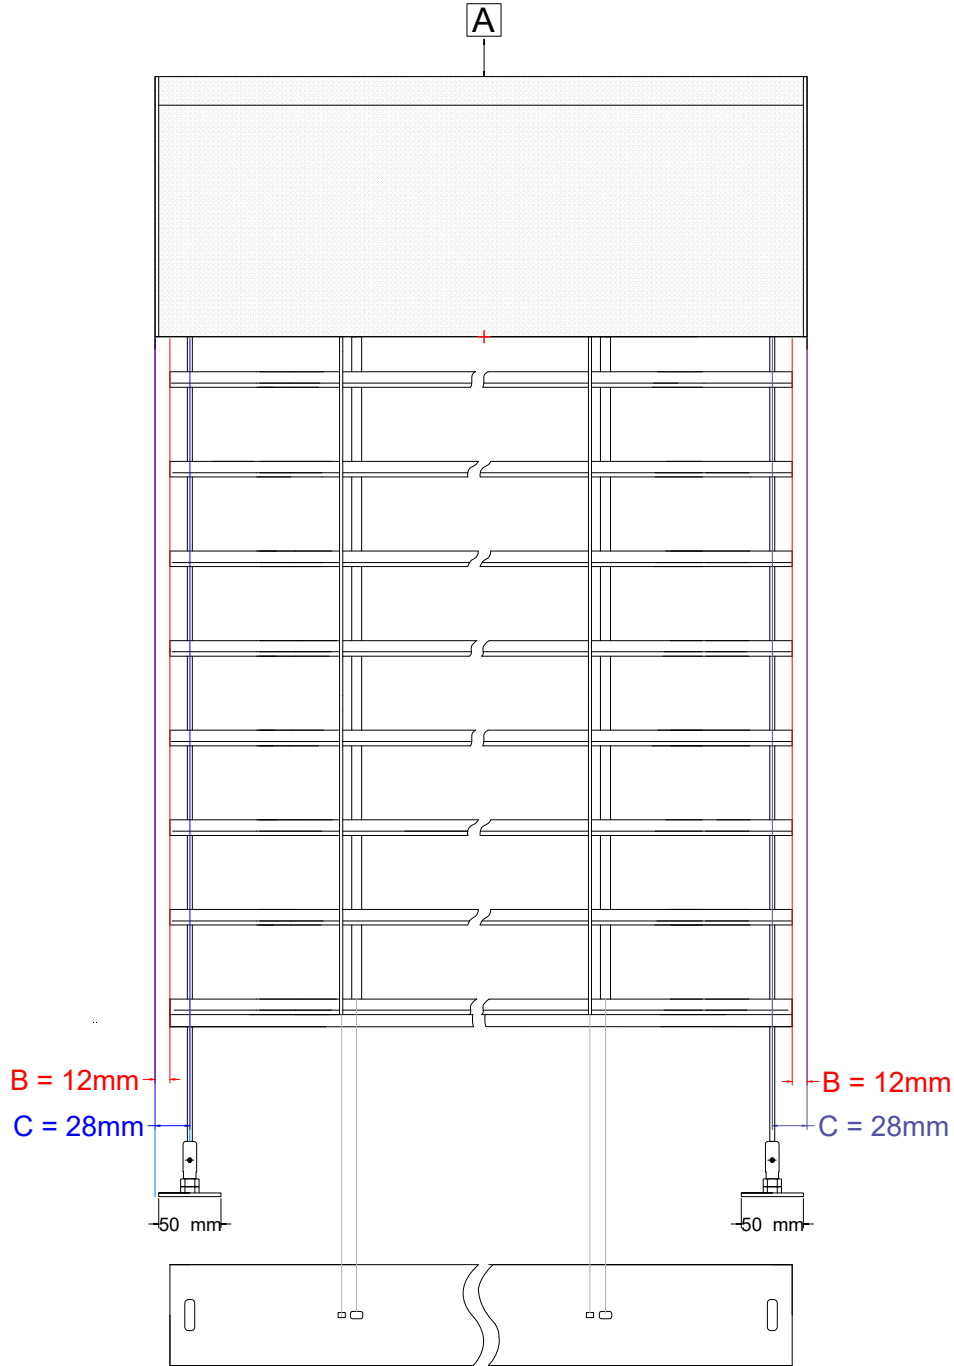


2.1 EV80 Wire Guide With Surface Fixing

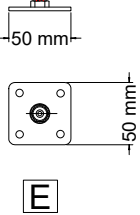

- A = Pelmet. Refer to pelmet section for detailed options
- B = Deduction Made From Outside Of Pelmet To Slat Edge
- C = Distance From Outside Pelmet To Centre Of Wire
- D = Concrete Plate
- E = Swage Plate

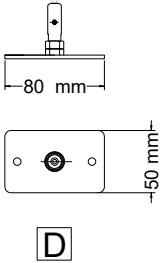

E
 Rod terminal on Swage Plate to be crimped onsite using hand swaging tool.
 The crimped point is set by raising the plate on 5mm packers above the finished surface.